

# POWER TILT KONTROL-KARRIERS

## Options and Accessories

Use correct size Diameter Adaptor for each smaller size drum.


Simply insert the Diameter Adaptor into the drum holder to handle your smaller drum with the same unit. To return to handling a 55-gallon (208 liter) drum, simply lift the Diameter Adaptor out of the drum holder.

Example: Use model 195A-1-115 with model 55/30-19 Diameter Adaptor inserted to lift and dispense your 19" (48.3 cm) diameter drum.

Diameter Adaptors for 14" to 17.5" (35.6 to 44.5 cm) diameters have integrated hold-down brackets at top and bottom of the drum. The hold-downs adjust for a drum up to 38" (96.5 cm) tall.

Diameter Adaptors from 18.5" to 22" (47 to 55.9 cm) lack the hold-down brackets. The optional Bracket Assembly (part # 4556-P) is required for handling your plastic drum, and recommended to more securely hold your fiber drum.

Model 55/30-19GR Diameter Adaptor only fits models with 3-Piece Drum Holder. It quickly and easily inserts to handle your 19" (48.3 cm) diameter 30-gallon (114 liter) steel drum. Then simply lift it back out to go back to handling a 55-gallon (208 liter) steel drum.

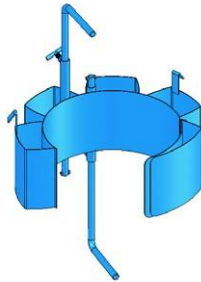

Model 55/30-16




Model 55/30-19



Model 55/30-19GR

Install the optional Bracket Assembly (part # 4556-P) to prevent your 55-gallon (208 liter) plastic drum from slipping through the drum holder. It is also recommended to more securely hold your fiber drum.

With the Bracket Assembly in place you can handle a drum from 31" to 37" (78.7 to 94 cm) tall, and it still accepts Diameter Adaptors for your smaller drums. Note: Diameter Adaptors for 14" to 17.5" (35.6 to 44.5 cm) diameter have integrated brackets, therefore do not require the Bracket Assembly.

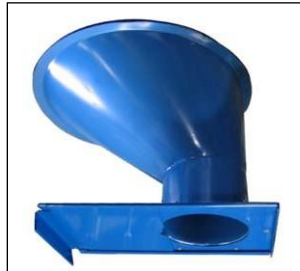

Model 195A-1-115 shown with  
Model 55/30-19 Diameter  
Adaptor

### Asymmetric Drum Cone

Attach an Asymmetric Drum Cone with slide gate valve to your drum to start and stop material flow as needed. Also available with iris valve, or with flange to attach valve of your choice. Asymmetric Drum Cones can be used with standard Kontrol-Karriers.

### Diameter Adaptors

Steel Adaptors	Fit Diameter *
55/30-22	21.5" to 22" (54.6 to 55.9 cm)
55/30-20.5	20" to 20.5" (50.8 to 52.1 cm)
55/30-19	18.5" to 19" (47 to 48.3 cm)
55/30-17.5	17" to 17.5" (43.2 to 44.5 cm)
55/30-16	15.5" to 16" (39.4 to 40.6 cm)
55/30-14.5	14" to 14.5" (35.6 to 36.8 cm)
55/30-19GR **	19" (48.3 cm)

### How to Measure for Diameter Adaptors



**Measure  
Diameter  
Between Ribs**

circumference divided  
by pi (3.14)

\* Measure circumference half way down your drum. Then divide by pi (3.14).

\*\* Only fits models with 3-piece drum holder  
e.g. Model 195G

### Dimensions

